INSTALLATION MANUAL



ALPINE SLIDEOUT COVER

CAREFREE STYLE CODE "HI ROLLER, KG/SG ARMS"

RV



Read this manual before installing or using this product. Failure to follow the instructions and safety precautions in this manual can result in personal injury and/or cause the product to not operate properly.

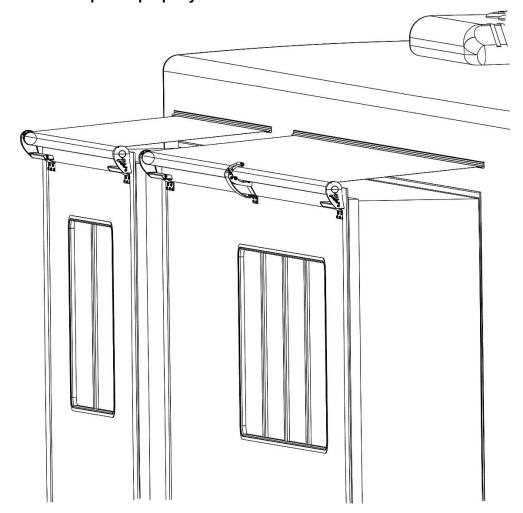


TABLE OF CONTENTS

Product Overview	
General Description and Specifications	
Standard Installation	
Component Checklist	
Adaptor Brackets	5
Mounting the Brackets	6
Installing an Awning Rail	6
Mounting the Roller Tube Assembly	
XL Installation	8
Component Checklist	
·	

Mounting the Brackets	9
Installing an Awning Rail	
Mounting the Roller Tube Assembly	
Installing the Cradle	
Remove the Locking Pins	

PROPRIETARY STATEMENT

The ALPINE SLIDEOUT COVER is a product of Carefree of Colorado, located in Broomfield, Colorado, USA. The information contained in or disclosed in this document is considered proprietary to Carefree of Colorado. Every effort has been made to ensure that the information presented in the document is accurate and complete. However, Carefree of Colorado assumes no liability for errors or for any damages that result from the use of this document.

The information contained in this manual pertains to the current configuration of the models listed on the title page. Earlier model configurations may differ from the information given. Carefree of Colorado reserves the right to cancel, change, alter or add any parts and assemblies, described in this manual, without prior notice.

Carefree of Colorado agrees to allow the reproduction of this document for use with Carefree of Colorado products only. Any other reproduction or translation of this document in whole or part is strictly prohibited without prior written approval from Carefree of Colorado.

SAFETY INFORMATION





This is the safety alert symbol. It is used to alert individuals to potential personal injury hazards. Obey all safety messages that follow this sysmbol to avoid possible personal injury or death.



Indicates a hazardous situation, which if not avoided, could result in death or serious bodily injury.



Indicates a hazardous situation, which if not avoided, may result in minor or moderate bodily injury.

NOTICE

Indicates a situation that may result in equipment-related damage.

General Safety:

WARNING This product can expose you to chemicals including Di-isodecyl phthalate (DIDP), Vinyl Chloride and Formaldehyde, which are known to the state of California to cause cancer or birth defects or other reproductive harm. For more information visit www.P65warnings.ca.gov



WARNING Shock Hazard. Always disconnect battery or power source before working on or around the electrical system.





WARNING Always wear appropriate safety equipment (i.e. goggles).




CAUTION Always use appropriate lifting devices and/or helpers when lifting or holding heavy objects.

NOTICE When using fasteners, do not over tighten. Soft materials such as fiberglass and aluminum can be "stripped out" and lose the ability to grip and hold.

PRODUCT OVERVIEW

GENERAL DESCRIPTION AND SPECIFICATIONS

- Light weight Slideout cover with style and performance;
- Simple Installation;
- Two mounting bracket(Tall/Short) are available to accommodate a range of room flange sizes;
- Carefree's innovative automatic anti-billow lock securely holds the fabric during travel.

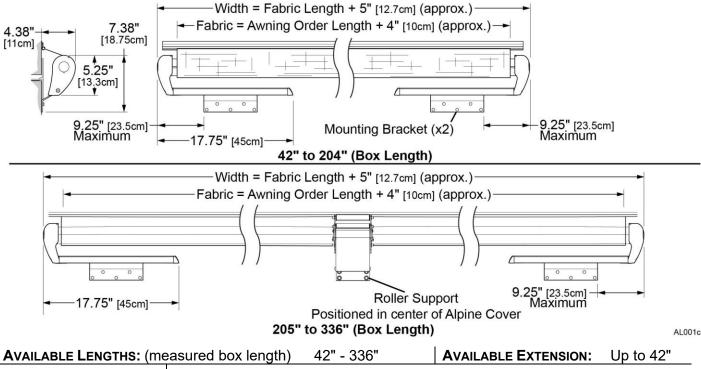


AVAILABLE LENGTHS: (measured box length) 42" - 336" AVAILABLE EXTENSION: Up					Up to 42"
FABRIC TENSION		One spring mounte	ed in RH end of roller t	ube	
COLOR:	Hardware:	White, Black			
	Fabric:				
WEIGHT:	Standard	Base Weight @ 4	12" Box Length = 13.5 lb	os; for every 12" inci	rease, add 1 lb
Weight calculation is approximate. Actual weight may vary based on specific installation details					le

NOTICE When installing the awning it is important that the correct awning length is used and that the brackets are positioned so that the arms are fully engaged in the mounting brackets as shown. Failure to mount the awning with the arms fully engaged can result in the anti-billow lock not functioning properly and allowing the awning to billow.

STANDARD INSTALLATION

COMPONENT CHECKLIST

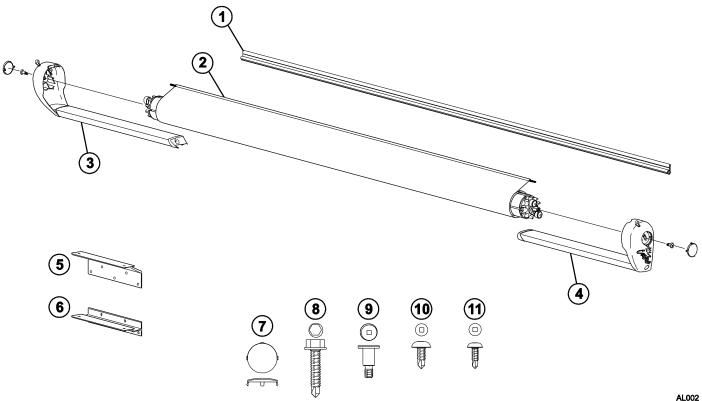

\square	ITEM	DESCRIPTION			QTY	NOTE
	1	Awning Rail			1	3
	2	Roller Tube Assy w/ Fabric			1	
	3	Endcap and Rail Assy, LH			1	
	4	Endcap and Rail Assy, RH			1	
	5	Mounting Bracket, Tall			2	2
	6	Mounting Bracket, Short			2	2
	7	End Plug			2	
	8	Screw, Self-Drilling, HWH	Bracket Mount	#12 x 1 1/4	10	
	9	Screw, Shoulder, Sq Drive	Roller Tube Attach	#10-32	2	
	10	Screw, Pan Head Sq Drive	Extension Attach	#10 x 1/2	4	
	11	Screw, Pan Head Sq Drive	Fabric Attach	#8 x 1/2	2	


Notes:

- 1. Awning configuration is specified at time of order, including awning length, fabric color etc. Check awning assembly against original purchase order.
- 2. Bracket style (item 5 or 6) is specified at time of order.
- 3. Awning rail must be specified at time of order. A screw packet is included with awning rail.

During installation, the room should be closed until instructed otherwise.

ADAPTOR BRACKETS

Some vehicles may have competitor's "prep brackets" installed for mounting their shorter slideout awnings. The Carefree Slide Topper Prepped Access Plate Adapter Kit (BX0013-2-WHT or BX0013-2-BLK) allows installers to mount Carefree slideout awnings on these "prep brackets". Refer to installation supplement "070045-001 BX0013 Carefree Slide Topper Prepped Access Plate Adapter Kit" for mounting instructions using the adaptor kit brackets.

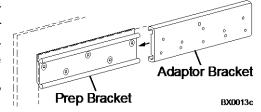


070017-001r8 5

MOUNTING THE BRACKETS

Two brackets are available for mounting the Alpine. The tall bracket is used for large flanges; the short bracket is used for smaller flanges.

NOTICE The mounting surface must have sufficient framing or backing to support the brackets and allow the use of the screws. Aluminum or fiberglass skins are not adequate to support the installation.

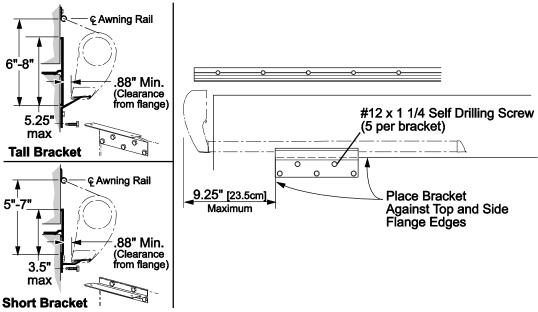


AL003

If installing a new awning rail:

1. Align the mounting brackets with the inner edges of the top and side room flanges. Go to step 3.

If using an existing awning rail:

- 2. Measure the distance from the inner flange edge to the center of the awning rail.
 - 2.1. <u>If the distance is within the range shown</u>, align the mounting brackets with the inner edges of the top and side room flanges. Go to step 3.
 - 2.2. If the distance is outside the range shown, adjust the vertical position of the bracket to match the acceptable range. The bracket can be mounted below or on the flange as long as the screws enter the structure of the room and the position does not exceed the maximum height to top of flange as shown.

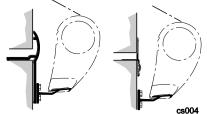

- 3. Use a suitable urethane based sealant or hybrid sealant and coat the mounting surface of the bracket with particular attention around the mounting holes.
- 4. Attach the brackets using the supplied #12 x 1 1/4 self-drilling screws.

Installing an Awning Rail

- 1. Measure up from the bracket as shown above. This is the centerline of the awning rail slot.
- 2. Seal the back of the rail with a suitable urethane based sealant or putty tape.
- 3. Align the centerline of the awning rail and attach using #10 x 3/4 screws. Position the slot pointing down.


To aid sliding the canopy into position:

- 4. Using a screwdriver slightly spread open one end of the awning rail.
- 5. Clean and deburr the end of the rail.
- 6. Spray inside the rail track with silicone lubricant.

Spread open the end of the awning rail

MOUNTING THE ROLLER TUBE ASSEMBLY

NOTICE Do not remove the spring locking pin until instructed after all steps are complete.

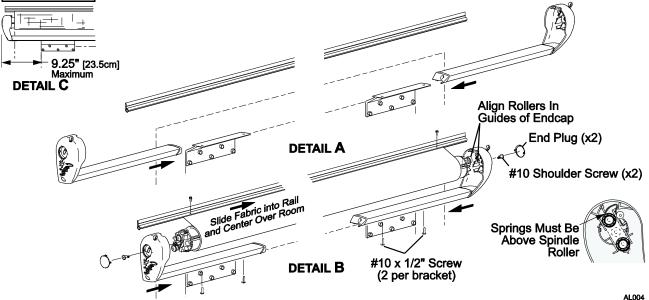

- 1. (Detail A) Slide the endcap assembly onto the mounting bracket. Do not attach at this time.
- 2. Repeat for the other side.
- 3. Unroll some of the fabric from the roller tube.
- 4. Slide the polyrod and fabric into the awning rail.
- 5. Roll up the slack material onto the roller tube.

NOTICE Failure to roll up the slack before installing the roller tube will reduce the spring tension. This can cause the fabric to sag and not roll up correctly when the room is closed.

6. (Details B) On the RH side (spring side), slide the endcap over the roller tube. Align the rollers inside the guides of the endcap and press the endcap firmly against the roller tube. The roller tube should be oriented with the head of the spring lock pin pointing up.

NOTE: Ensure that both return springs inside the endcap are above the spindle rollers.

- 7. Secure the roller tube using one (1) #10 shoulder screw. Torque screw to 25-35 in-lbs.
- 8. Repeat steps 7 and 8 for the LH end cap.
- 9. Center the roller tube and fabric over the room.

NOTICE | Ensure the endcap is pressed against the roller tube before attaching to the brackets.

10. (Detail B) From the bottom, attach the endcap assembly to the mounting brackets with two (2) #10 x 1/2 screws per bracket.

CAUTION The roller tube has one or two pre-wound springs. When the spring lock pin is removed, the roller tube spring will quickly roll up any slack material. Keep hands and fingers out of the way.

11. Remove the spring locking pin(s) from the end of the roller tube #8 x 1/2" Screw assembly. This may be located on the right end of the roller tube, or both ends of the roller tube.

- 12. Remove the orange float lock pin from both endcaps.
- 13. Open and close the room to ensure that the fabric is rolling up straight on the roller tube.

14. Secure the fabric to the awning rail using two #8 x 1/2 self-drilling screws through the rail and fabric.

070017-001r8 7


Spring Lock Pin (thru Roller Tube)

Float Lock Pin (thru Endcap)

AL006

XL INSTALLATION

COMPONENT CHECKLIST

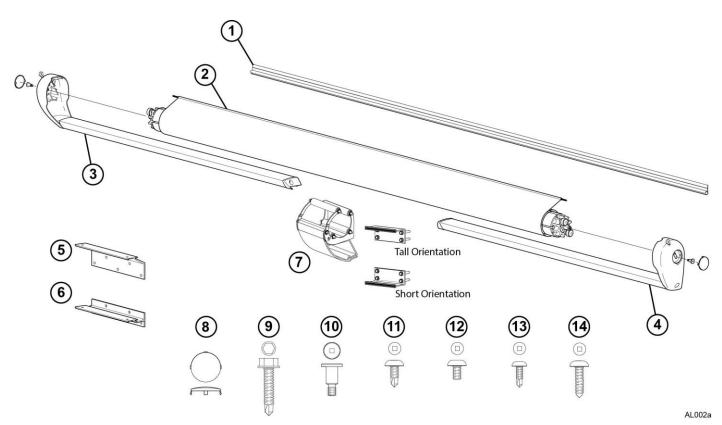

\square	ITEM	DESCRIPTION			QTY	NOTE
	1	Awning Rail			1	3
	2	Roller Tube Assy w/ Fabric			1	
	3	Endcap and Rail Assy, LH			1	
	4	Endcap and Rail Assy, RH			1	
	5	Mounting Bracket, Tall			2	2
	6	Mounting Bracket, Short			2	2
	7	Cradle, Roller Support (Supplied with bracket)			1	4
	8	End Plug			2	
	9	Screw, Self-Drilling, HWH	Bracket Mount	#12 x 1 1/4	14	
	10	Screw, Shoulder, Sq Drive	Roller Tube Attach	#10-32	2	
	11	Screw, Pan Head Sq Drive	Extension and Support Attach	#10 x 1/2	12	
	12	Screw, Pan Head Sq Drive	Cradle Cover Attach	#1/4-28 x 3/8	2	
	13	Screw, HWH	Fabric Attach	#6 x 3/8	2	
	14	Screw, Shoulder, Sq Drive	Cradle/Bracket attach	#10 X 1.00	2	


NOTES:

- 1. Awning configuration is specified at time of order, including awning length, fabric color etc. Check awning assembly against original purchase order.
- 2. Bracket style (item 5 or 6) is specified at time of order.
- 3. Awning rail must be specified at time of order. A screw packet is included with awning rail.
- 4. The bracket for the center cradle can be oriented for Tall or Short mounting, simply by flipping.

MOUNTING THE BRACKETS

Two brackets are available for mounting the Alpine. The tall bracket is used for large flanges; the short bracket is used for smaller flanges.

NOTICE The mounting surface must have sufficient framing or backing to support the brackets and allow the use of the screws. Aluminum or fiberglass skins are not adequate to support the installation.

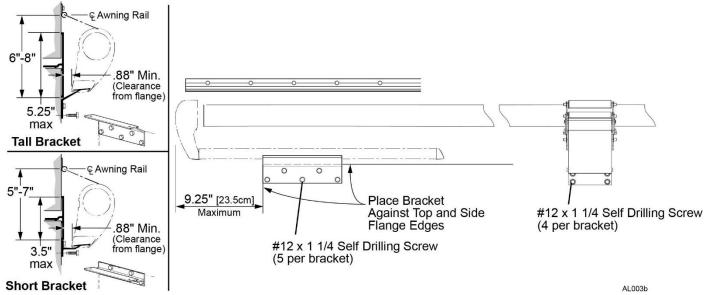


If installing a new awning rail:

1. Align the mounting brackets with the inner edges of the top and side room flanges. Space brackets as shown. NOTE: The cradle mounting bracket should be installed at the same vertical distance as the end brackets of the Alpine cover. Go to step 3.

If using an existing awning rail:

- Measure the distance from the inner flange edge to the center of the awning rail.
 - 1.1. <u>If the distance is within the range shown</u>, align the mounting brackets with the inner edges of the top and side room flanges. Go to step 3.
 - 1.2. If the distance is outside the range shown, adjust the vertical position of the bracket to match the acceptable range. The bracket can be mounted below or on the flange as long as the screws enter the structure of the room and the position does not exceed the maximum height to top of flange as shown.

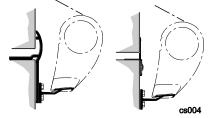

- 2. Use a suitable urethane based sealant or hybrid sealant and coat the mounting surface of the bracket with particular attention around the mounting holes.
- 3. Attach the brackets using #12 x 1 1/4 self-drilling screws.

Installing an Awning Rail

- 1. Measure up from the bracket as shown above. This is the centerline of the awning rail slot.
- Seal the back of the rail with a suitable urethane based sealant or putty tape.
- 3. Align the centerline of the awning rail and attach using #10 x 3/4 screws. Position the slot pointing down.

To aid sliding the canopy into position:

- 4. Using a screwdriver slightly spread open one end of the awning rail.
- Clean and deburr the end of the rail.
- 6. Spray inside the rail track with silicone lubricant.

Spread open the end of the awning rail

070017-001r8 9


MOUNTING THE ROLLER TUBE ASSEMBLY

NOTICE Do not remove the spring locking pins until instructed after all steps are complete.

- 1. (Detail A) Slide the endcap extension onto the mounting brackets. Do not attach at this time.
- 2. Repeat for the other side.
- 3. Unroll one wrap of the fabric from the roller tube.
- 4. Slide the polyrod and fabric into the awning rail.

NOTICE Failure to roll up the slack before attaching the roller tube will reduce the spring tension. This can cause the fabric to sag and not roll up correctly.

- 5. Roll up the slack material.
- 6. (Detail B) On the RH side (spring side), slide the endcap over the roller tube. Align the rollers inside the guides of the endcap and press the endcap firmly against the roller tube. The roller tube should be oriented with the head of the spring lock pin pointing up.

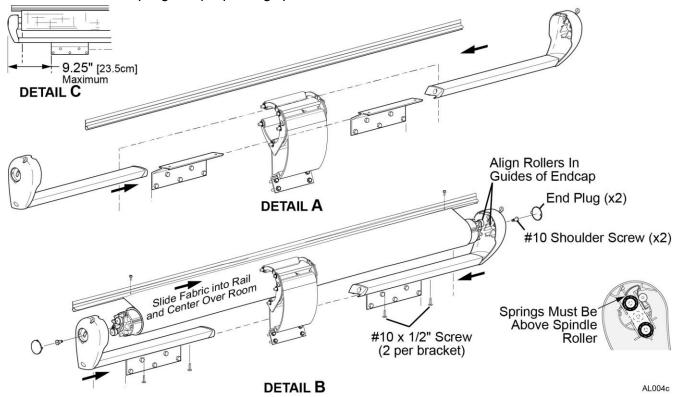


NOTE: Ensure that both return springs inside the endcap are above the spindle rollers.

- 7. Secure the roller tube using one (1) #10 shoulder screw. Torque screw to 25-35 in-lbs.
- 8. Repeat steps 7 and 8 for the LH end cap.
- 9. Center the roller tube and fabric over the room.
- 10. Attach the endcap assemblies to the mounting brackets with two (2) #10 x 1/2 screws per bracket.

INSTALLING THE CRADLE

- 4. Close the cradle over the roller tube and fabric. Secure using two (2) 1/4-28 x 3/8" screws

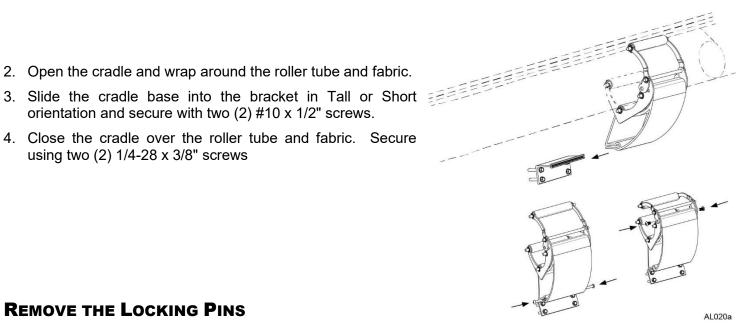

REMOVE THE LOCKING PINS

CAUTION The roller tube has a pre-wound spring. When the spring lock pin is removed, the roller tube spring will quickly roll up any slack material. Keep hands and fingers out of the way.

Spring Lock Pin (thru Roller Tube) 1. Remove the spring locking pin from the end of the roller tube #8 x 1/2" Screw assembly. This is located on the right end of the roller tube.

2. Remove the orange float lock pin from both endcaps.

3. Open and close the room to check that the fabric is rolling up straight.

4. Secure the fabric to the awning rail using two (2) #8 x 1/2 self-drilling screws through the rail and fabric.

Float Lock Pin

(thru Endcap)

AL006

070017-001r8 11

OEM INSTALLATION AUDIT FORM



OEM NAME:	LOCATION OR PLANT #:
AUDIT RSM:	DATE:
Unit #:	COACH MODEL:
PRODUCT DESCRIPTION:	
AWNING SERIAL NUMBER / DATE CODE:	
CONFIRM ALL OF THE INSTALLATION SECT DESCREPANCIES BELOW.	TONS ARE BEING ACCOMPLISHED. NOTE
PRODUCT HANDLING, DISCREPANCIES & OTH Use the space below to note any other observations auditors.	
Review the above with the appropriate OEM prod recognizing and understanding all discrepancies and c the revision and part number is visible. Send a PDF to copy for RSM files and one copy for OEM Applications I	orrective action. Take a picture of this page, noting OEMtechreports. Leave a copy with the OEM, one
OEM Representative (please print)	OEM Signature
	<u>-</u>
OEM Position	Dato

Disclaimer: Carefree performs random audits as a service for our customers to help identify situations where installations may not conform to installation instructions, and to identify any potential installation errors. Audits are a random, one-time checkin time and do not verify all of the attributes specified in the installation instructions. Carefree cannot be held responsible for any damages or costs as a result of incorrect installation. OEMs must always install products according to installation instructions. This document does not constitute liability or culpability on Carefree's part for incorrect installations performed by the OEM.