




FREEDOM RM ADAPTOR BRACKETS

Kit No: BS0019

SPRINTER EXTENDED LENGTH BRACKETS USED WITH OEM MOUNTING RAIL

Kits

PACKAGE CONTENTS:

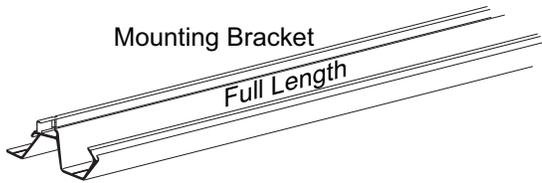


	Neoprene Strip	M6 x 20 Screw (x3)	M6 Square Nut (x3)
Twist Lock	1/4 x 3/4 Screw	M6 Washer	M6 Nylock Nut
-118 → (x4)	(x10)	(x14)	(x4)
-157 → (x5)	(x12)	(x17)	(x5)
-177 → (x4)	(x15)	(x19)	(x4)
-197 → (x5)	(x15)	(x20)	(x5)

BS0019b

MOUNTING THE BRACKETS


The bracket is pre-drilled for the rear mounting screws that go through the roof and support cross members. Some OEM's may have preinstalled threaded inserts in the required locations.

1. Remove the release paper from the neoprene strip and attach to the rear bottom face of the bracket. Trim for best fit.
2. Loosely attach the twist lock studs, flat washers and nylock nuts in the front holes of the bracket.

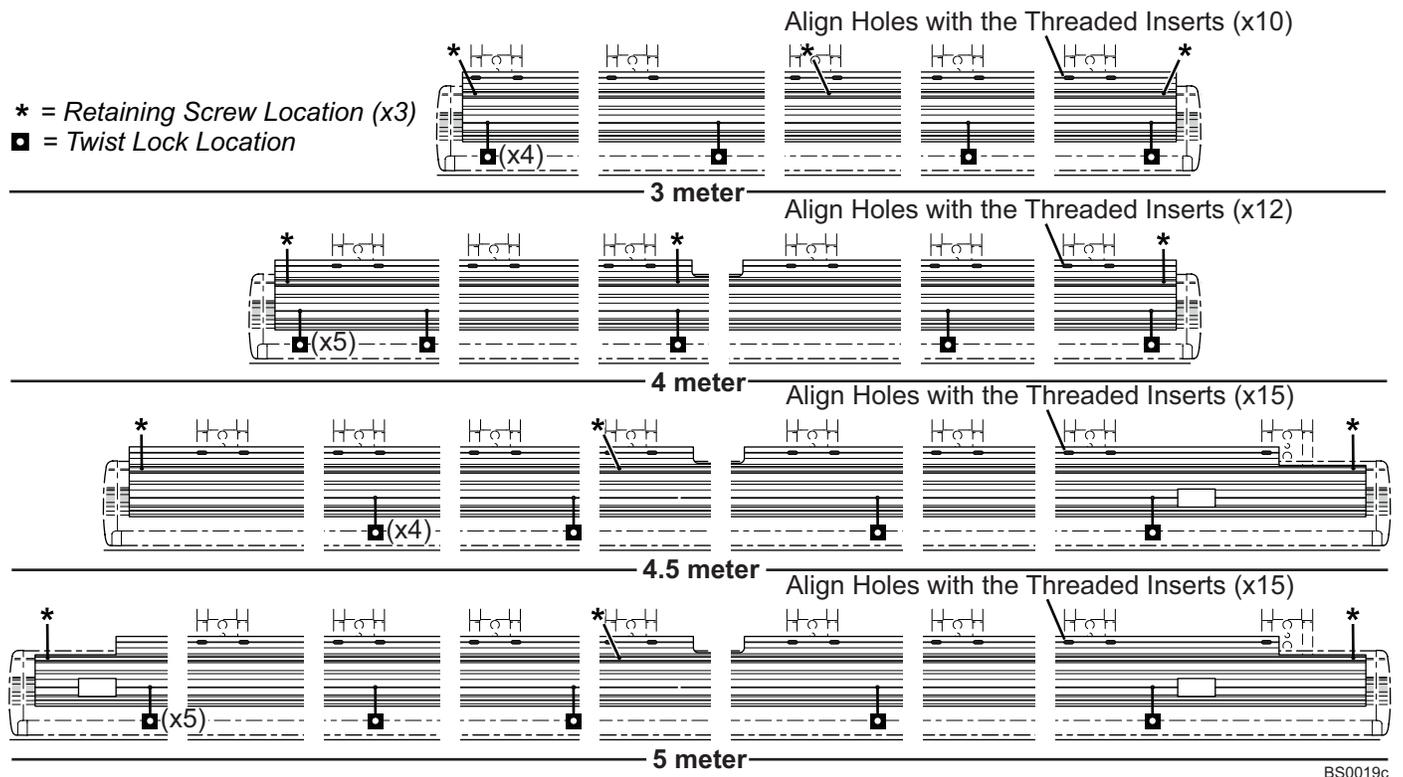

BS0019c

3. From one end of the track, slide the brackets onto the rail with the twist lock fasteners inside the rail.
4. Position the bracket on the roof. Align the rear slots with the threaded inserts in the roof.
5. Tighten the nuts for the twist lock fasteners.
6. Secure the brackets to the roof using 1/4 x 3/4 screws and flat washers.

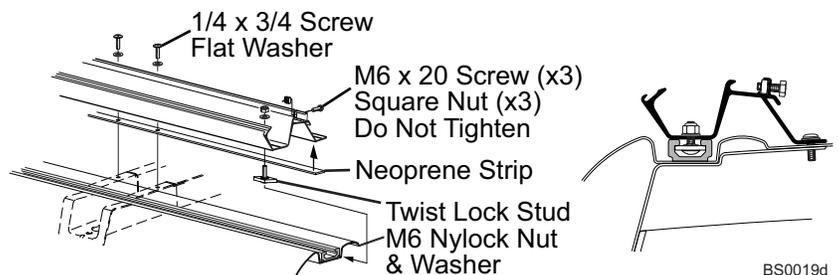

BS0019d

7. In the rear track of the mounting brackets, start three (3) M6 x 20 screws and square nuts through the retaining screw holes (these are marked with an "*" in the above illustration). Do not tighten at this time.
8. Mount the awning according to the installation manual for the awning.