



FREESTYLE RM ADAPTOR BRACKETS



Kit No: BS0017

Kits

4M AND SMALLER SPRINTER 28" BRACKETS, NO MOUNTING RAIL

The BS0017 mounting bracket kit is used for the Sprinter vans not equipped with the OEM Sprinter mounting rails. The bracket is pre-drilled to match the OEM rail stud locations.

PACKAGE CONTENTS:

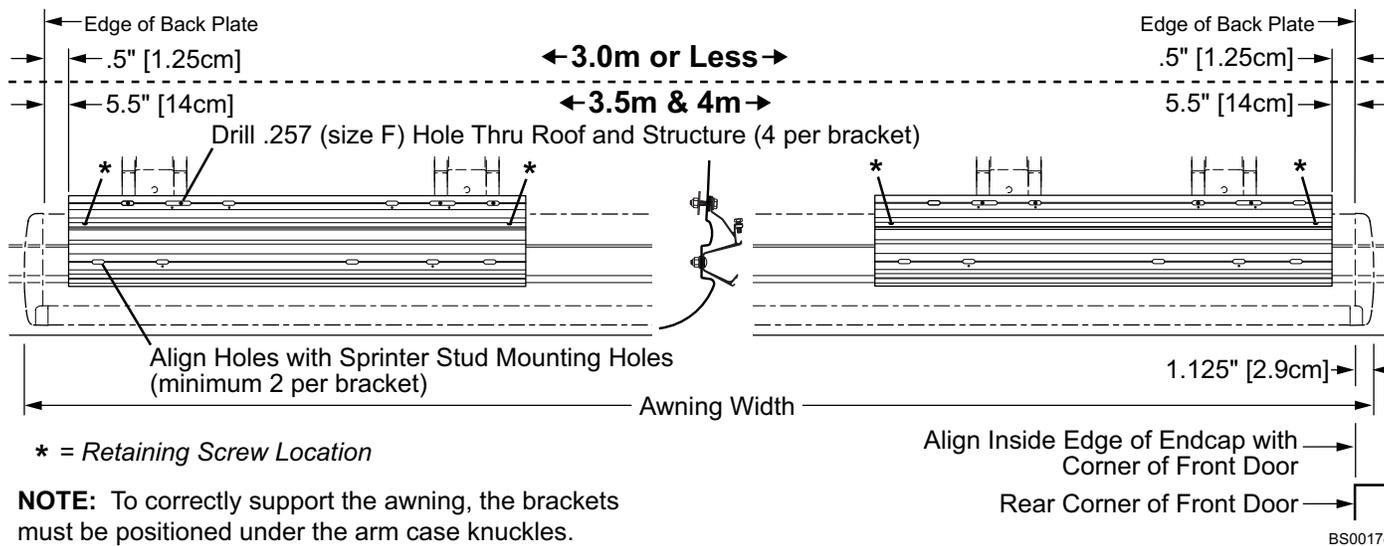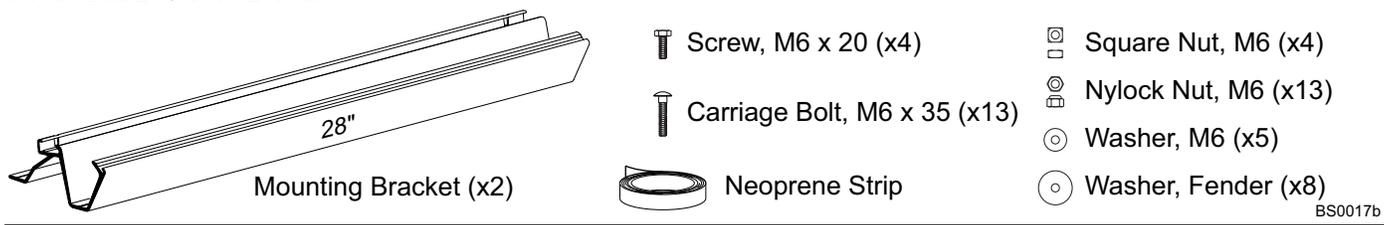

NOTE: To correctly support the awning, the brackets must be positioned under the arm case knuckles.

1. If not previously done, remove the hole plugs at the stud locations and clean any gaskets and sealing material.
2. Remove the release paper from the neoprene strip and attach on the rear bottom face of the brackets.
3. Coat the front bottom face of the brackets with a quality urethane based sealant.
4. Place the brackets so that the front holes align with the stud mounting holes on the vehicle.
5. Attach each bracket through the stud mounting holes using a minimum of two (2) each M6 x 35 carriage bolts, flat washers and nylock nuts.
6. Using the bracket as a template, drill eight (4 per bracket) .257" (size F) holes through the roof and structure.
7. Attach each bracket through the rear holes using four (4) each M6 x 35 carriage bolts, flat washers, fender washers and nylock nuts.
8. In the rear track of the mounting bracket, start four (4) M6 x 20 screws and square nuts through the retaining screw holes. Do not tighten at this time.
9. Refer to the Freestyle RM installation manual to complete the awning installation.

