




FREEDOM WM VAN ADAPTOR BRACKETS

KIT NO: 019861-002


Kits

RENAULT MASTER '98

PACKAGE CONTENTS:

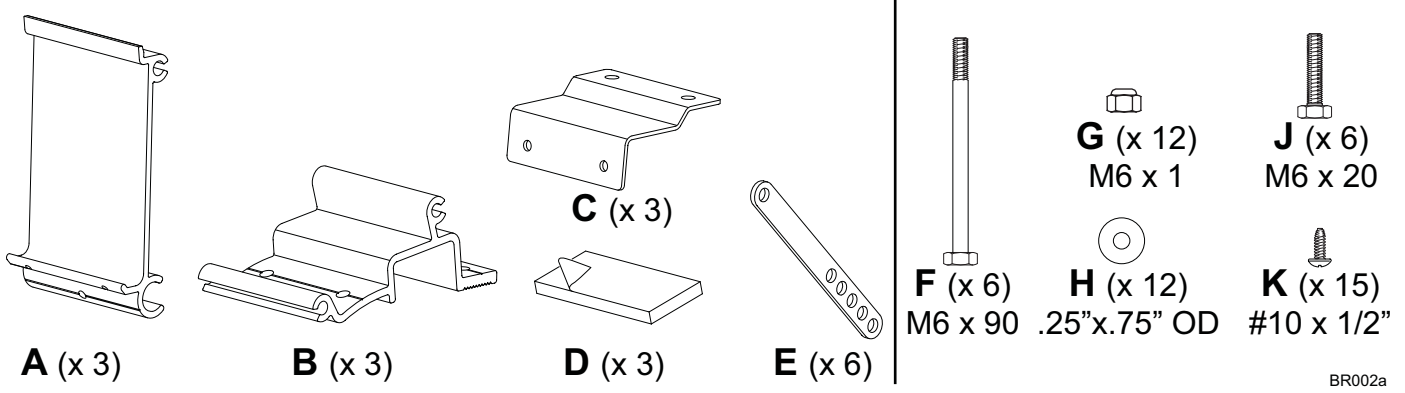

INSTALLATION

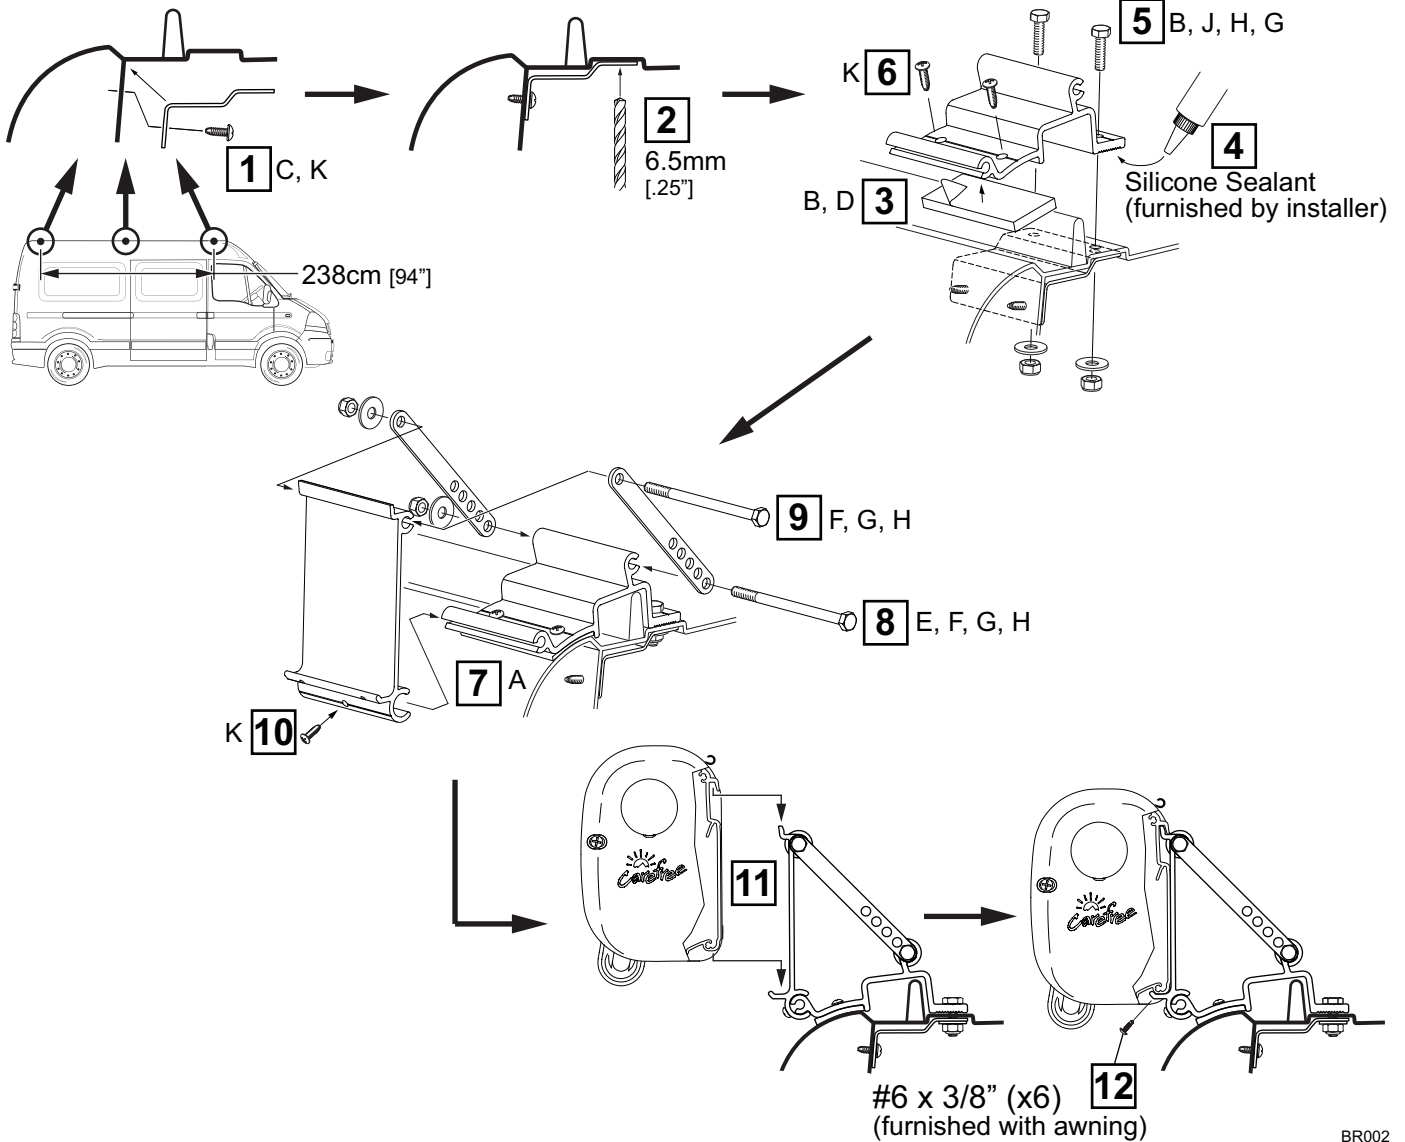

BR002