




# FREEDOM RM ADAPTOR BRACKETS

Kit No: BS0019

**SPRINTER EXTENDED LENGTH BRACKETS  
USED WITH OEM MOUNTING RAIL**

Kits

**PACKAGE CONTENTS:**

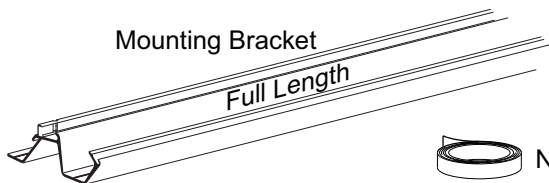


- Twist Lock (x5)
- Washer, M6 (x17)
- Nylock Nut, M6 (x5)
- Screw, PPH, M6 x 20 (x12)
- Square Nut, M6 (x3)
- Screw, M6 x 20 (x3)

BS0019b

**MOUNTING THE BRACKETS**

The bracket is pre drilled for the rear mounting screws that go through the roof and support cross members. Some OEM's may have preinstalled threaded inserts in the required locations.

1. Remove the release paper from the neoprene strip and attach to the rear bottom face of the bracket. Trim for best fit.
2. Loosely attach five (5) each twist lock stud, flat washer and nylock nut in the front holes of the bracket.

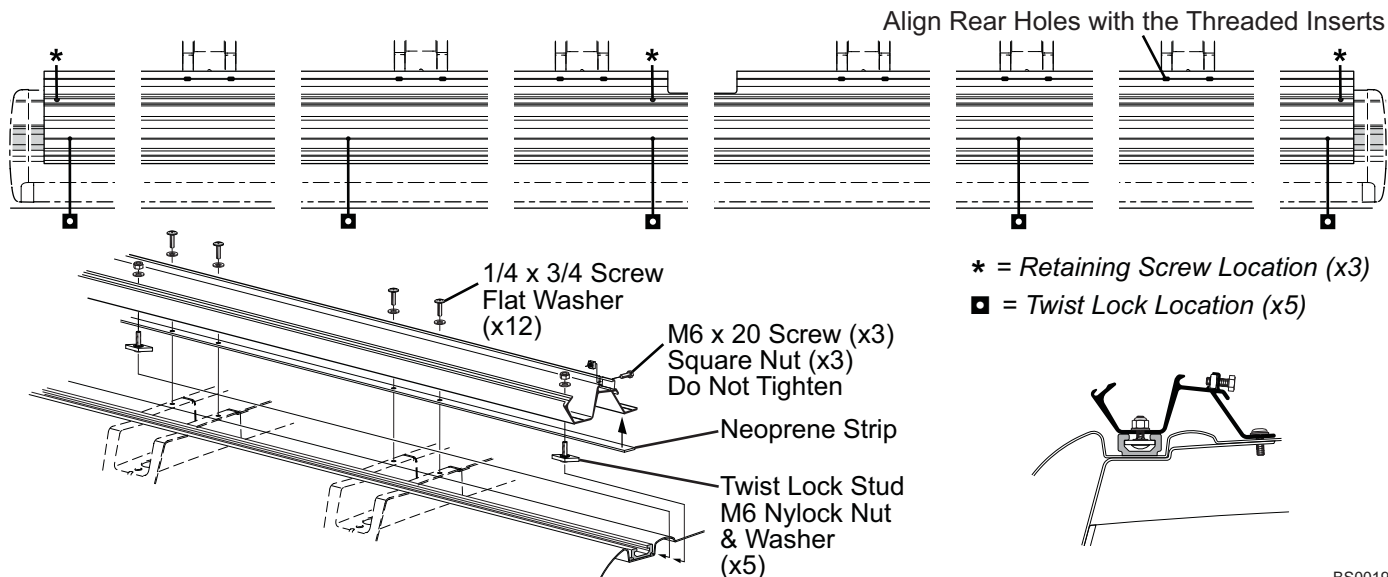

BS0019c

3. From one end of the track, slide the brackets onto the rail with the twist lock fasteners inside the rail.
4. Position the bracket on the roof. Align the rear slots with the threaded inserts in the roof.
5. Tighten the nuts for the twist lock fasteners.
6. Secure the brackets to the roof using 12 (12) each 1/4 x 3/4 screws and flat washers.
7. In the rear track of the mounting brackets, start three (3) M6 x 20 screws and square nuts through the retaining screw holes (these are marked with an "\*" in the above illustration). Do not tighten at this time.
8. Mount the awning according to the installation manual for the awning.