


THE ONE-TOUCH WIND BRACES STORE SEPARATELY AND ARE INTENDED TO BE USED IN WINDY CONDITIONS. FOR YOUR BEST PROTECTION, IF YOU INTEND TO LEAVE YOUR VEHICLE WITH THE AWNING OUT, IT IS ALWAYS GOOD TO PUT THE WIND BRACES INTO PLACE. THE USE OF THE WIND BRACES ELIMINATES USING ANY WIND TIE DOWN STRAPS. FOLLOW THESE STEPS FOR PROPER INSTALLATION.

**STEP 1:** PLACE THE SADDLE OF THE WIND BRACE UNDER THE PIVOTING AREA OF THE AWNING BRACES AS SHOWN AT THE RIGHT.

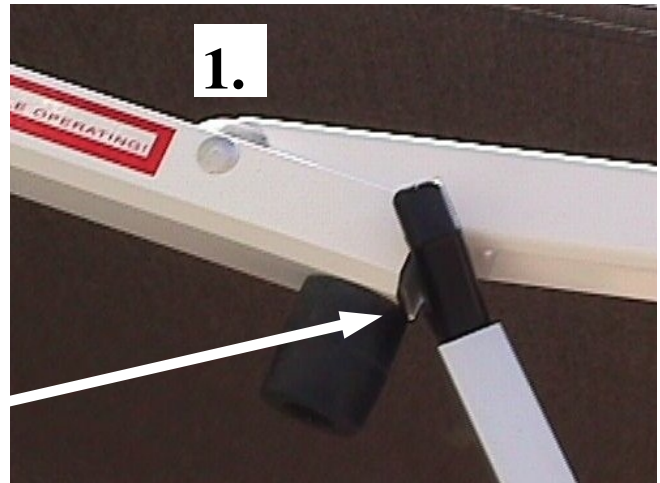

**STEP 2.** WITH THE BRACE POSITIONED AS SHOWN BELOW, SLIDE DOWNWARD UNTIL THE BRACE BOTTOMS OUT ON THE INSIDE OF THE ARM CHANNEL AND MAKES CONTACT DOWN AGAINST THE TOP OF THE ARM COVER AS SHOWN BELOW RIGHT. THE SPRING IN THE WIND BRACE SHOULD BE AT LEAST SLIGHTLY COMPRESSED AT THIS POINT.

**STEP 3:** TO OBTAIN PROPER TENSION ON THE WIND BRACE IT MAY BE NECESSARY TO ADJUST THE BRACE BY PUSHING INWARD ON THE SPRING BUTTON AND LOCATING IT IN A DIFFERENT HOLE, EITHER DECREASING OR INCREASING THE OVER-ALL LENGTH OF THE BRACE. (SEE LOWER LEFT) PROPER ADJUSTMENT IS WHEN THE SPRING IS AT LEAST SLIGHTLY COMPRESSED WHEN THE BRACE IS IN THE POSITION AS SHOWN DIRECTLY BELOW.

