




FREESTYLE RM ADAPTOR BRACKETS

Kit No: BS0023 -157 (4M)

DODGE PROMASTER AND FIAT DUCATO


Kits

PACKAGE CONTENTS:

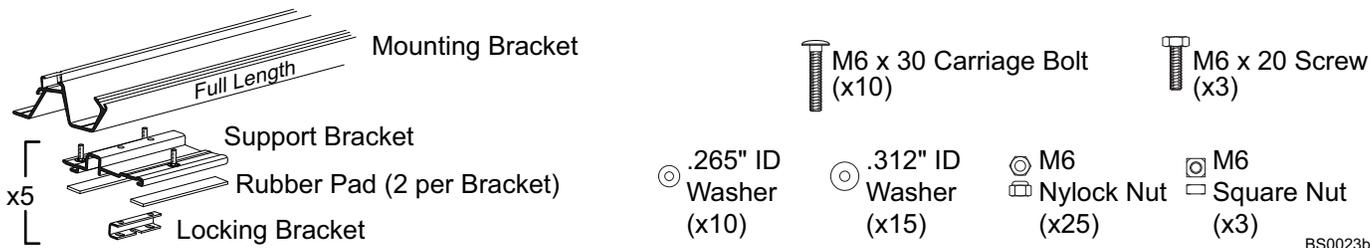




BS0023b

BRACKET INSTALLATION

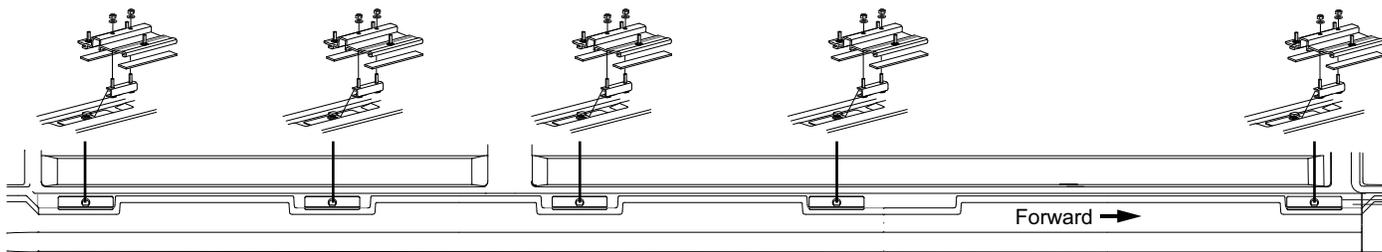

NOTE: To correctly support the awning, the locking brackets and support brackets must be arranged as shown. BS0023c

1. Attach the self-adhesive rubber pads to the bottom of the support brackets.
2. Place two (2) M6 x 35 carriage bolts through the locking brackets.
3. Place the locking brackets onto the studs on the roof.
4. Position the support brackets over the carriage bolts. Ensure that the support brackets are positioned on the locking brackets as shown.
5. Loosely secure each bracket with two (2) each .265" ID washers and nylock nuts.
6. Ensure that the brackets are in-line then tighten the nylock nuts.
7. Place the mounting bracket onto the support brackets. Align the holes in the mounting bracket with the studs in the support brackets.
8. Attach mounting bracket using the supplied M6 nylock nuts and .312" ID washers (15 places).
9. In the rear track of the mounting bracket, start three (3) M6 x 20 screws and square nuts through the retaining screw holes of the bracket. Do not tighten at this time.
10. Mount the awning according to the installation manual for the awning.

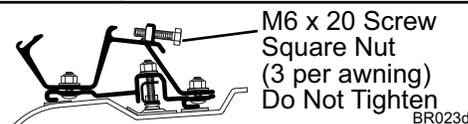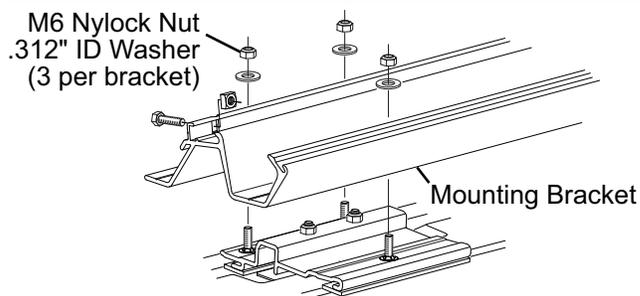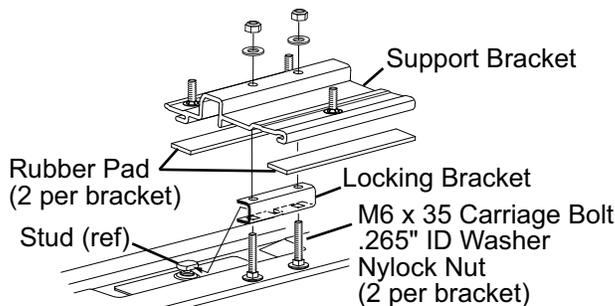

BR023d