





PARAMOUNT ARM SHIM KIT FOR THE PARAMOUNT LONG ARMS

Models: Paramounts built prior to September 1, 2008.

Purpose: To prevent the awning from over extending causing the arm elbows to lock out.

Summary of Work: For each arm: Remove existing spacer from elbow, add additional spacers.

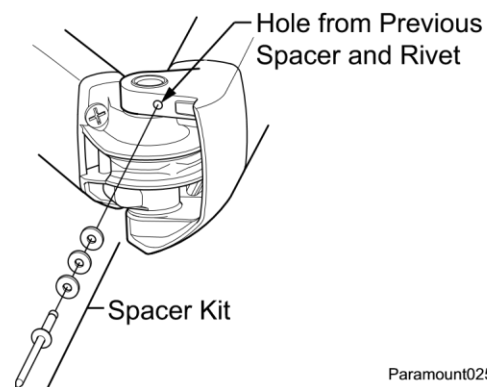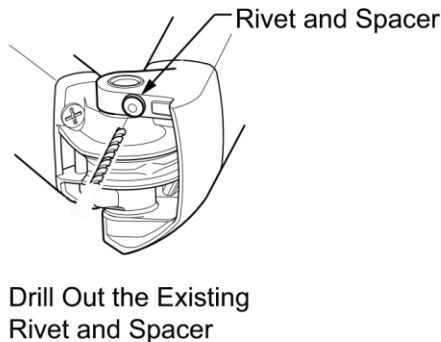

1. Open the awning 12"-14" past the slide out room position to provide access to the long arm elbows.
2. Using an 1/8" drill bit, drill out the existing rivet and spacer and discard.

CAUTION

DO NOT ATTEMPT TO PULL THE ELBOW JOINT OUT OF THE ARM EXTRUSION. THE SPRINGS ARE UNDER TENSION.

3. In the existing hole, attach the three (3) spacers to the elbow using the furnished pop rivet.
4. Repeat for both arms.