
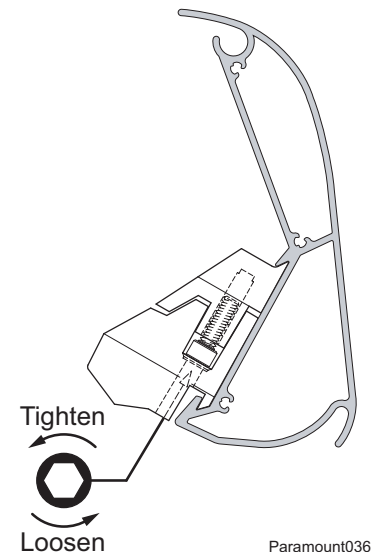


The ramp block aids the lead rail to close properly. This kit can be used to replace damaged blocks or can be used to retrofit earlier units that do not have a ramp block.

The ramp block mounts in the center of the lead rail.

1. Open the awning to access the inside of the lead rail.
2. Disconnect power.

⚠ CAUTION When the power is on, the Direct Response system is active. Movement during this procedure can cause the awning to attempt to close unexpectedly.

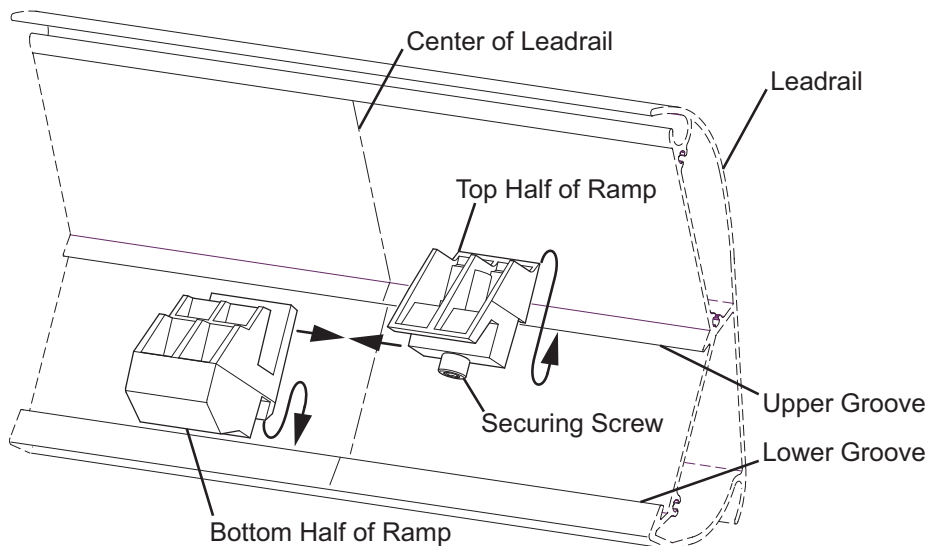

Paramount036

3. Slide the bottom half of the ramp block into the lower groove of the lead rail.
4. If not previously done, fully insert the securing screw into the top half of the ramp block.
5. Slide the top half of the ramp block into the upper groove of the lead rail.
6. Slide the two block halves together and center in the lead rail.
7. Turn the securing screw counterclockwise to tighten the block halves in the lead rail.