




**FREEDOM WM VAN ADAPTOR BRACKETS**

Kit No: 019861-001




**Kits**

**MERCEDES VITO**

**PACKAGE CONTENTS:**

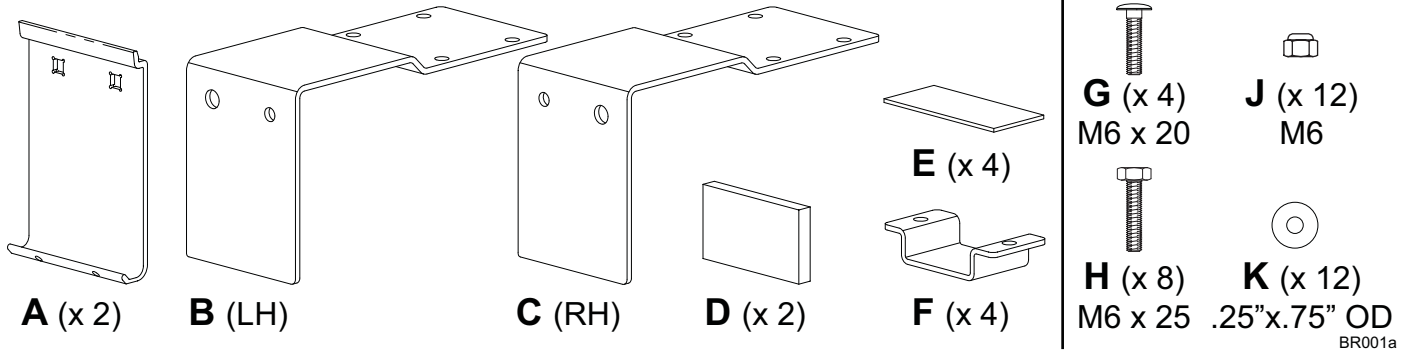


**INSTALLATION**

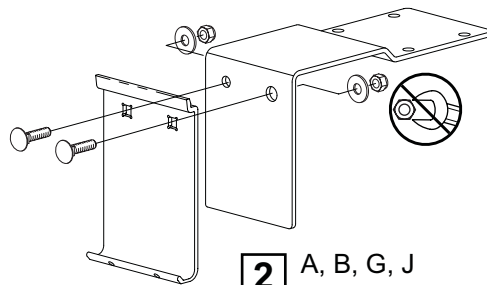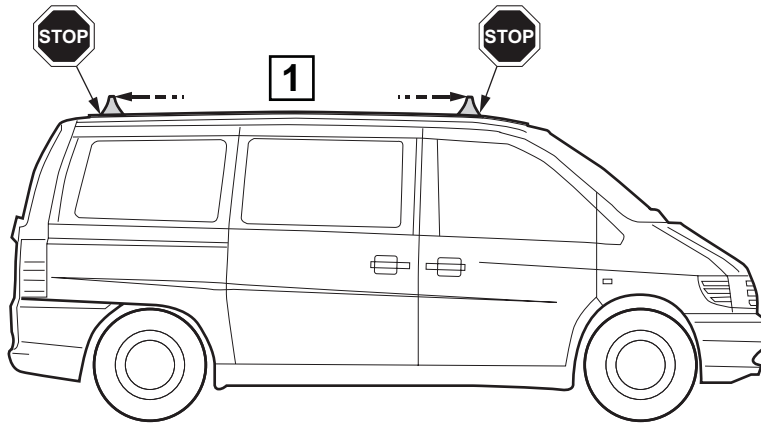

BR001

**INSTALLATION (CONT)**

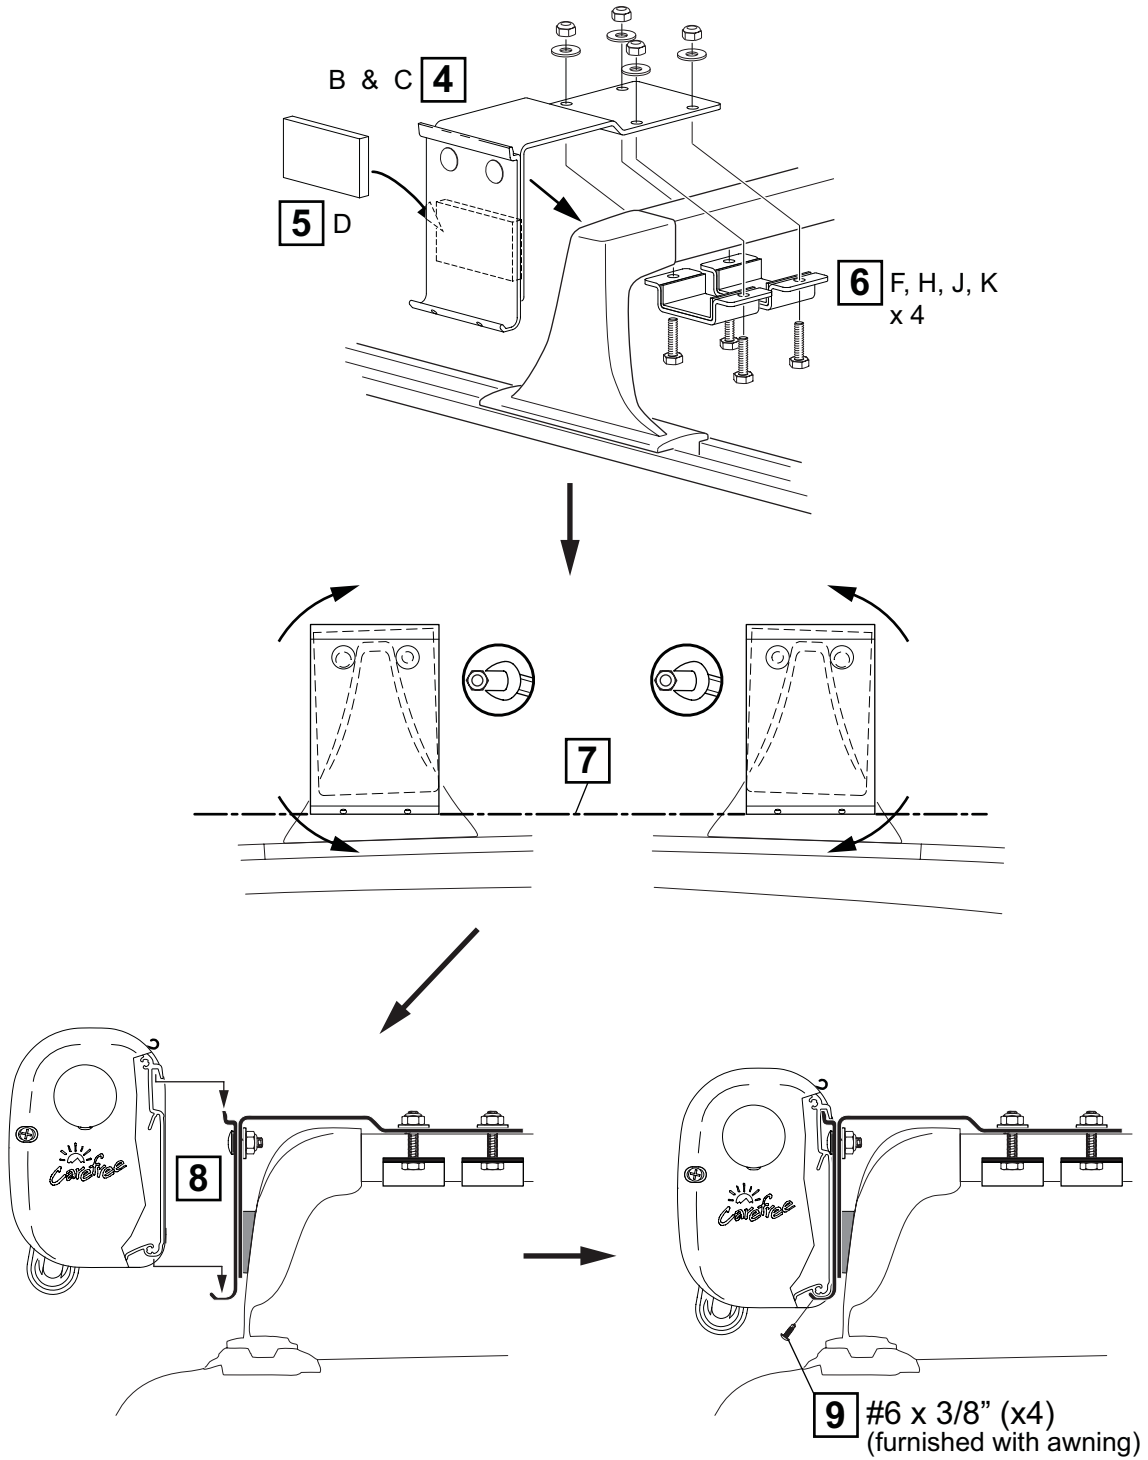

BR001b