

# SUMMIT APPLICATION CRITERIA

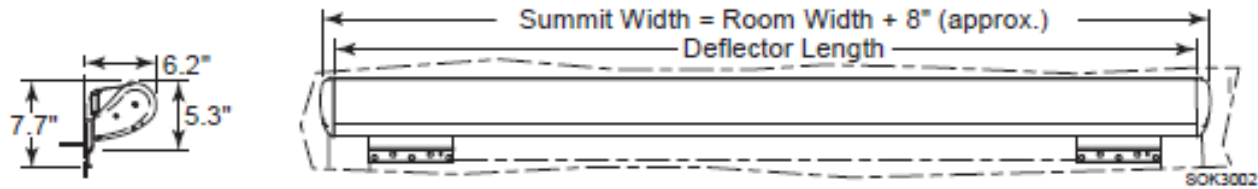


Figure 1. Summit General Dimensions.

AVAILABLE ROOM WIDTHS: BASIC 42" - 191" XL 192" - 390" AVAILABLE EXTENSIONS: 12" - 42"

AVAILABLE LIFT ARM APPLICATIONS (ROOM WIDTH VS ROOM EXTENSION)

ROOM EXTENSION	ROOM WIDTH																											
	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67-390		
12																												
13																												
14																												
15																												
16																												
17																												
18																												
19																												
20																												
21																												
22																												
23																												
24																												
25																												
26																												
27																												
28																												
29																												
30																												
31																												
32																												
33																												
34																												
35																												
36																												
37																												
38																												
39																												
40																												
41																												
42																												

Lift Bar Option Not Available For These Combinations

**RESTRICTIONS:** The Lift Bar Option is not suitable under any of the following conditions.

- Flat Drop Rooms and rooms where the room face drops more than the ranges given below

ROOM EXTENSION	12"-19"	20"-25"	26"-31"	32"-37"	38"-42"
ALLOWABLE DROP	.5"	.75"	1"	1.25"	1.5"

The value is determined by measuring the height of the flange when the room is closed then opening the room completely and measuring the height of the flange again. If the difference exceeds the ranges above, the lift bar option is not suitable.

- Rooms with an awning mounted over the top of the slide-out room.
- Rooms with an awning mounted on the face of the room where the top of the roll bar is less than 1/2" below the roof line of the room when the room is closed.
- Recessed rooms. The lift bars store between the coach wall and the awning; when the room is closed there is not enough clearance for the lift bar assembly.
- Additional layout requirements may restrict installations. Refer to the "Pre-Installation Layout" on page 4 for the Basic Summit. Refer to the "Pre-Installation Layout" on page 12 for the Summit XL.