


FREEDOM WM ILLUSTRATED PARTS LIST

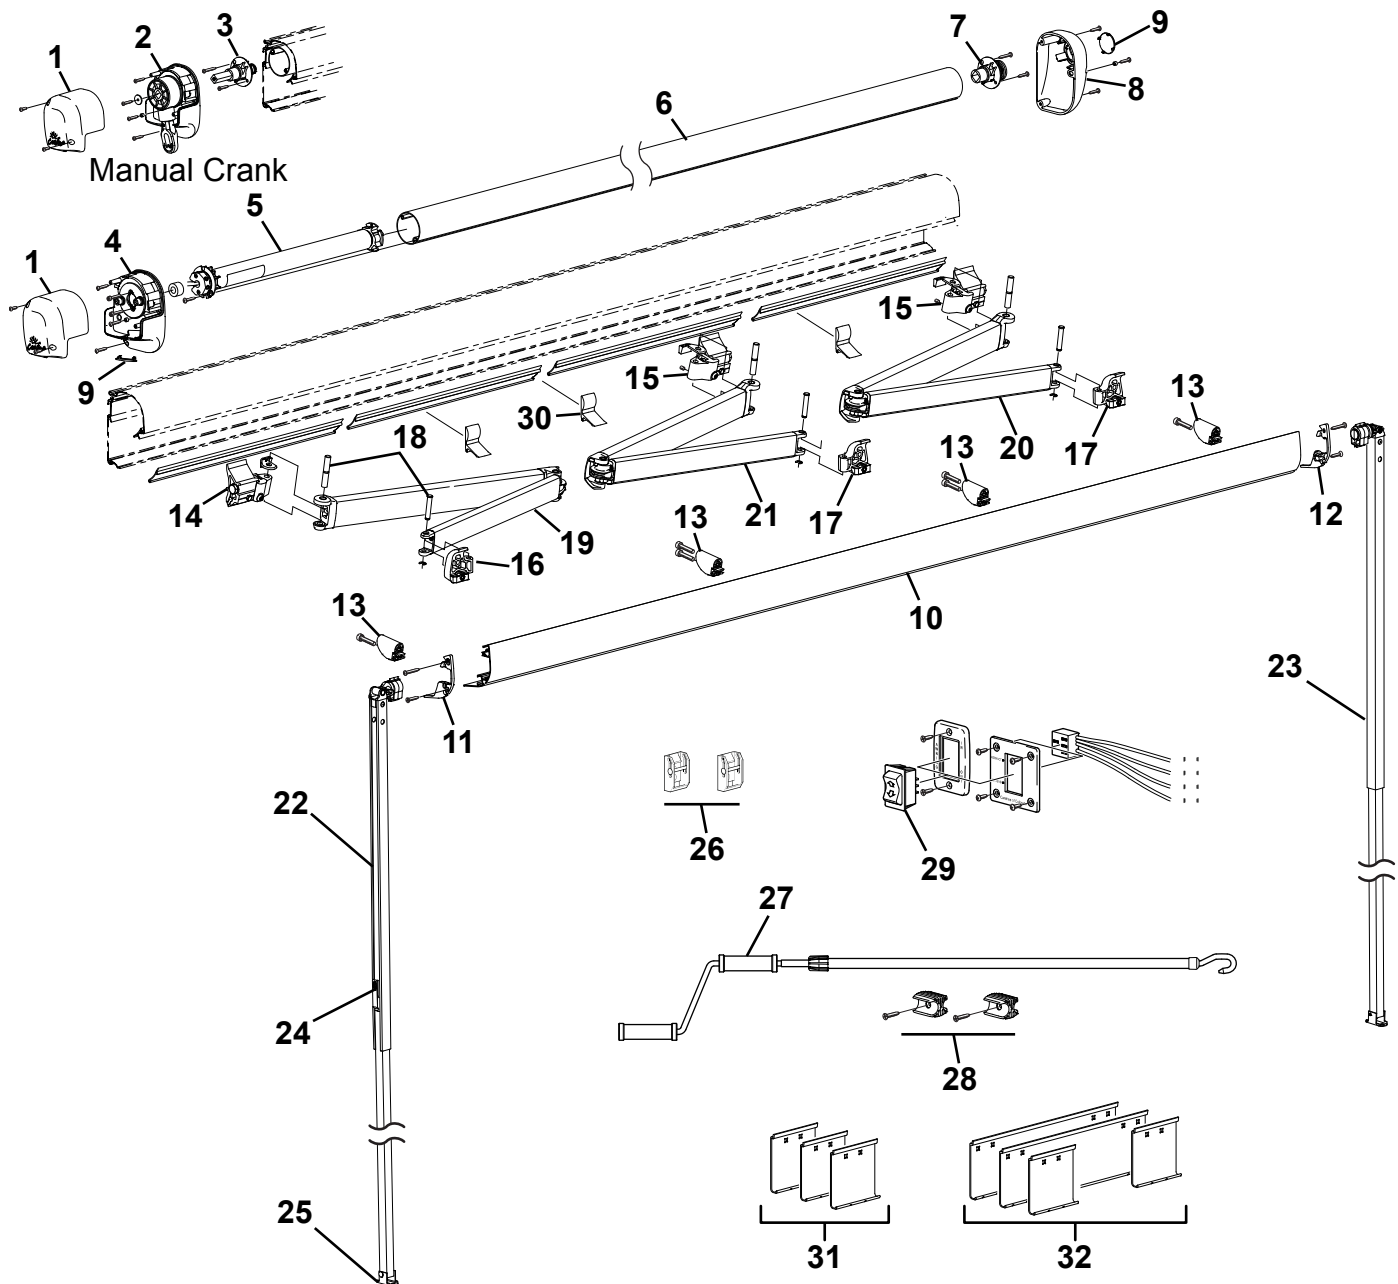

Item	Part Number	Description	Notes
1	R001618XXX	End Cap, LH, Outer	
2	R001619XXX	Gear Assy, Manual Crank	3
3	R001622	Roller Tube End plug, LH, used with manual crank	
4	R001861XXX	Inner Endcap Assembly, used with motorized	
5	R001651	Motor Assy	4,6
6	610900-xxx.xx	Roller Tube	
7	R001623	Roller Tube End plug, RH	
8	R001620XXX	End Cap, RH	
9	R040792XXX	Plug (-005=white;-006=black; -291=satin)	
10	R001811X-aa-xxx	Lead Rail	1,2,9
11	R001624XXX	End Plate, Lead Rail, LH	
12	R001625XXX	End Plate, Lead Rail, RH	
13	R001621	Ramp Kit, Leadrail	
14	R001626	Knuckle Assy, Case, LH	5
15	R001627	Knuckle Assy, Case, RH	5
16	R001628	Assy, Pivot, LH	5

Item	Part Number	Description	Notes
17	R001629	Assy, Pivot , RH	5
18	R001630	Hardware Pack, Arm Attach, 1 Arm	
19a	R012530-TB56L	Spring Arm, LH 2.2 Meter	5
19b	R012530-TB68L	Spring Arm, LH 2.44 Meter	used thru 05/2017 5,10
19c	R012530-TB76L	Spring Arm, LH 2.57 Meter	used thru 05/2017 5
19d	R012530-TB79L	Spring Arm, LH 2.44 & 2.57 Meter	used 06/2017 & ON 5,10
19e	R012530-TB94L	Spring Arm, LH 3 Meter & Up	5
20a	R012530-TB56R	Spring Arm, RH 2.2 Meter	5
20b	R012530-TB68R	Spring Arm, RH 2.44 Meter	used thru 05/2017 5,10
20c	R012530-TB76R	Spring Arm, RH 2.57 Meter	used thru 05/2017 5
20d	R012530-TB79R	Spring Arm, RH 2.44 & 2.57 Meter	used 06/2017 & ON 5,10
20e	R012530-TB94R	Spring Arm, RH 3 Meter & Up	5
21	R012530-TB94M	Spring Arm, Center 4.5 and 5 meter only	5,8
22	R001654-003	Vertical Support Leg, LH	Used with 2.2 Meter
	R001654-001	Vertical Support Leg, 3-piece, LH	Used with 2.44 & 2.57 Meter
	R001654-002	Vertical Support Leg, LH	Used with 3 Meter & Up
23	R001654-103	Vertical Support Leg, RH	Used with 2.2 Meter
	R001654-101	Vertical Support Leg, 3-piece, RH	Used with 2.44 & 2.57 Meter
	R001654-102	Vertical Support Leg, RH	Used with 3 Meter & Up
24	R001657	Flipper Latch Kit, Orange	7
25	R00394	Carport Foot	
26	R019283-231	Kit, Bottom Bracket, Satin	qty: 2
	R019283-005	Kit, Bottom Bracket, White	qty: 2
	R019283-006	Kit, Bottom Bracket, Black	qty: 2
27	R001546-RP	Crank, Telescoping	
28	901072	Crank Handle Clip	qty: 2
29	R001605	Switch Kit	6
30	R001969	Arm Bumper	qty: 1
31	R019311-004	Hardware Pack 2.43-4m Manual	Satin
	R019311-504	Hardware Pack 2.43-4m Manual	White
	R019311-604	Hardware Pack 2.43-4m Manual	Black
	R019311-001	Hardware Pack 2.43-4m Motorized	Satin
	R019311-501	Hardware Pack 2.43-4m Motorized	White
	R019311-601	Hardware Pack 2.43-4m Motorized	Black
32	R019311-005	Hardware Pack 4.5-5m Manual	Satin
	R019311-505	Hardware Pack 4.5-5m Manual	White
	R019311-605	Hardware Pack 4.5-5m Manual	Black
	R019311-003	Hardware Pack 4.5-5m Motorized	Satin
	R019311-503	Hardware Pack 4.5-5m Motorized	White
	R019311-603	Hardware Pack 4.5-5m Motorized	Black

- NOTES
1. XXX = Color WHT = White; BLK = Black; GRY = Satin
 2. -xxx = awning length (2.2m, 2.44m, 2.57m, 3m, 3.5m, 4m, 4.5m, 5m)
 3. Gear Assy (item 2) includes gear and inner End Cap assembled. Parts not available separately.
 4. Motor Assy (item 5) includes motor, bearing and one-way drive. Parts not available separately.
 5. Attaching hardware not included with spring arm assemblies. Order item 18.
 6. A motor upgrade kit (SR0097XXX) is available for manual crank awnings and includes motor assembly (item 5), switch kit (item 29) and attaching hardware.
 7. Original vertical support legs use a gray flipper latch. Replacement latch kit is R00144. If leg has orange flipper latch, Use replacement latch kit R001657.
 8. The middle spring arm is different than the outer arms. Center arms can be identified by the blue dot located on or near the case connector of the arm. Do not use center arms for replacing outer arms, do not use outer arm to replace the center arm.
 9. For Item 10 (lead rail): X= Color; B=Black, W=White, S=Satin. aa = LED; LO= w/ LED outside, LI= w/ LED Inside, XX=No LED. xxx= product order length.
 10. Starting in 2017, the 2.44m awning has a longer extension (80" and uses arms items 19d, 20d. Previous 2.44m awnings has a shorter extension (72") and uses arms items 19b, 20b.
If the extension is not known, measure the location of the arm mount relative to the endcap.
Arms are not interchangeable between extensions.

